

RTS controls explained


Smooove Wall Switch



Up button

Down button

Situ Remote Control

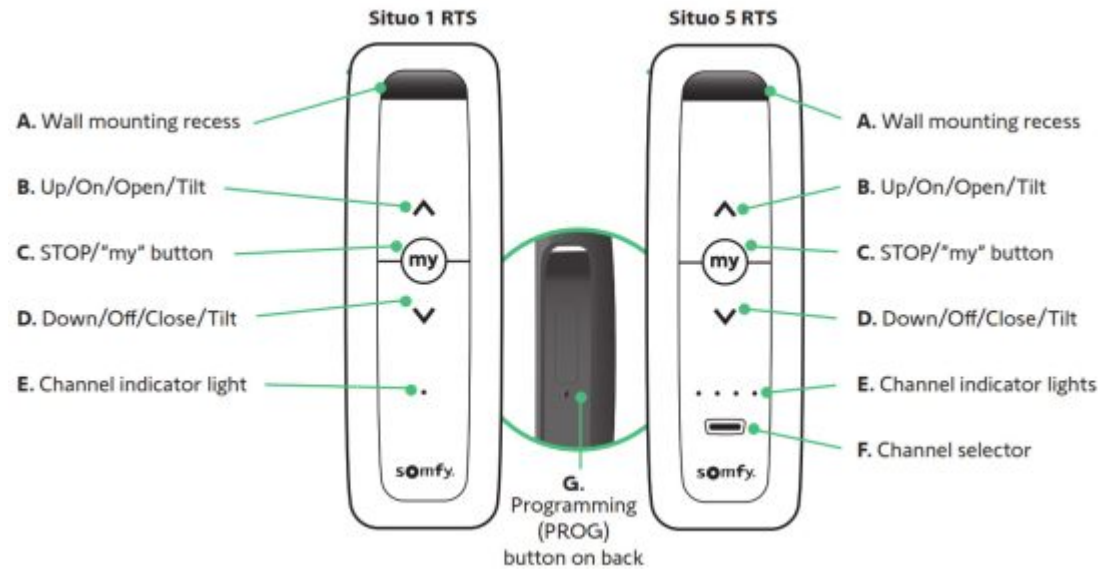

This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.

Before You Start – Important Information



- Only the blind you want program can be connected to the power whilst programming. Disconnect all other blinds from the power to avoid interference.







- Do not reduce the motor cable to less than 30cm as this may cause communication problems between the remote control and the motor as the motor uses the copper core of the cable as a radio antenna.
- Do not connect the power until you are ready to begin programming.

This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.


Before You Start

Only one motor should be powered on at a time when setting limits or making any programming changes

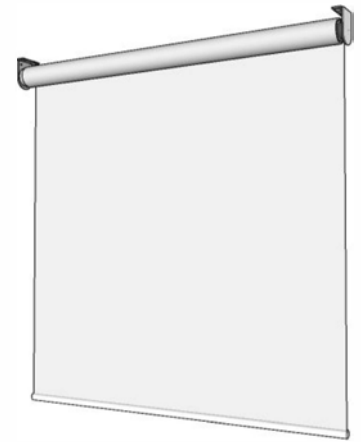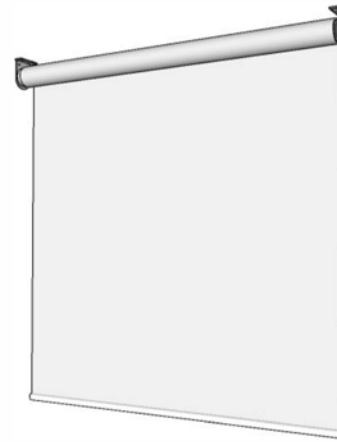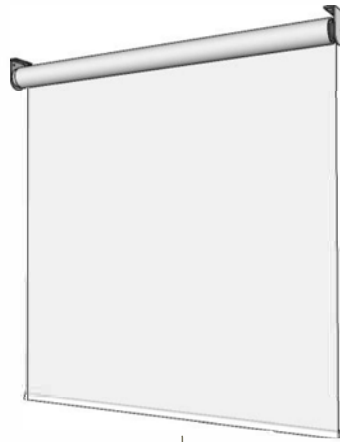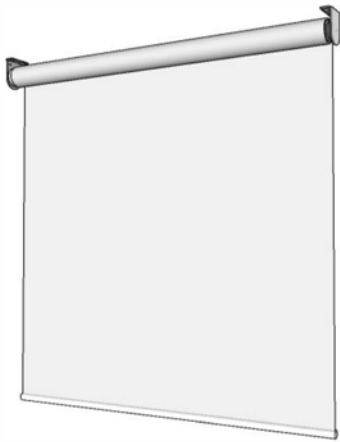

This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.

Pairing The Remote - Pairing the remote and setting turning direction

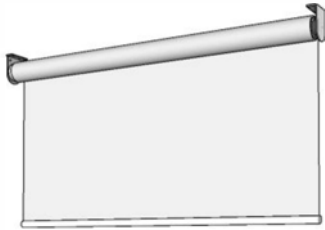


Connect the power to the blind you want to program.





You now have 60 seconds to complete the steps on this page and pair the remote control

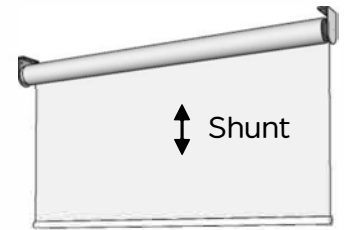

If you have a multi channel remote, select the channel you wish to pair the blind to




Press and hold the   buttons together on the remote control until the blind shunts



Pairing complete


This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.

Changing Turning Direction - Check and change the turning direction of the motor

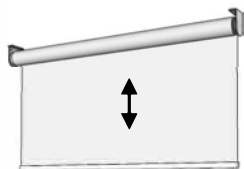


Press and hold the ▼ button and observe the direction the blind travels.


It could travel in either direction depending on which side the motor is on

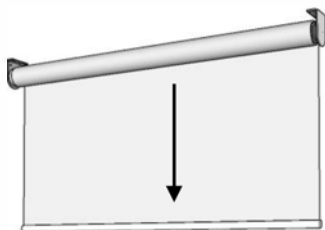


If the blind travels DOWN when you press the ▼ button you can skip the rest of this page and move straight on to setting the limits

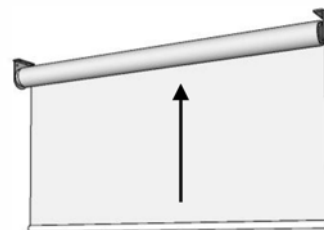

If the blind travels UP when you press the ▼ button you need to change the turning direction

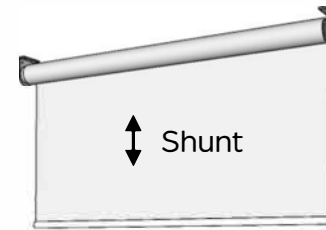

Press and hold the MY button until the blind does a shunt

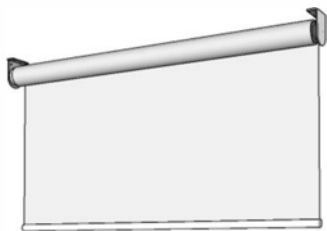

Turning direction changed



 
You can now check the turning direction is correct by pressing and holding EITHER the ▲ or ▼ button

The motor is still in programming mode so you have to press and hold to drive the blind

This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.


Adjusting Limits

How to adjust any limit. The upper and lower limits are set in the factory but you may wish to tweak them.






Either top or
bottom limit

 Move the blind to the limit you
wish to adjust





 
Shunt

 Press and hold the  
buttons together until the blind
shunts




 
Shunt

Use the   buttons to move
the blind to the new stop
position you wish to set



Shunt

Press and hold the  button
until the blind shunts

 


Limit Adjusted


This page and the following pages are only relevant if you are sending the blind back to factory settings or you are changing the blinds limits.

Setting Limits

Set a top and bottom limit position



 Use the ▲ ▼ buttons to move the blind to the position required for a top limit




Press and hold the ▼ MY buttons together until the blind starts to open





Press the MY button once to stop the blind moving




Use the ▲ ▼ buttons to move the blind to the position required for a bottom limit

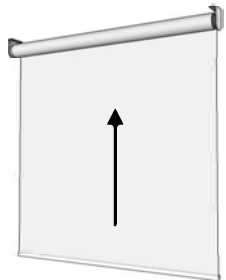

 
Press and hold the ▲ MY buttons together until the blind starts to open

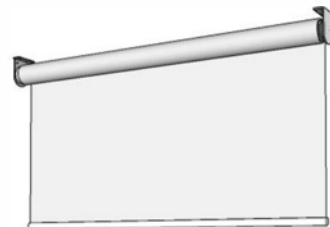

Press the MY button once to stop the blind moving

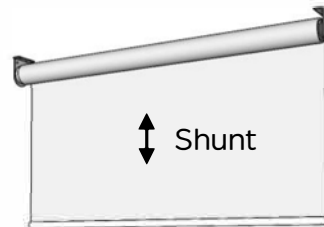

Press and hold the MY button until the blind shunts

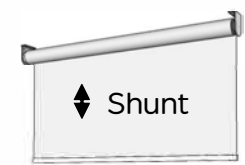

Shunt




Press and hold the red button on the back of the remote until the motor shunts




Limits Set

Intermediate Stop Position


It is optional to set an intermediate stop position

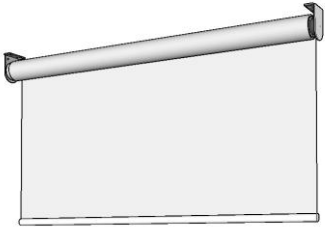

Drive the blind to a middle position where you require an intermediate stop

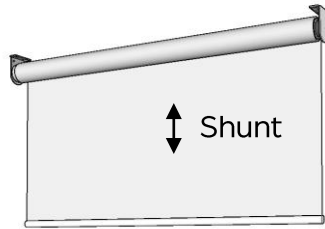

Press and hold the **MY** button until the blind shunts

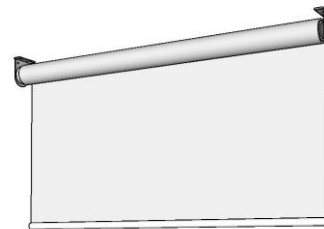


Intermediate stop set




The intermediate stop position (or MY position) can not be in the same place as the top or bottom limit position


Deleting the intermediate stop position

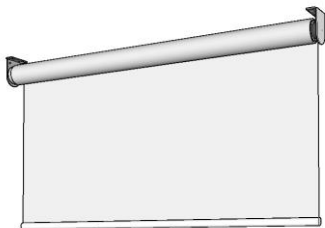

Press the **MY** button to drive the blind to the intermediate stop position

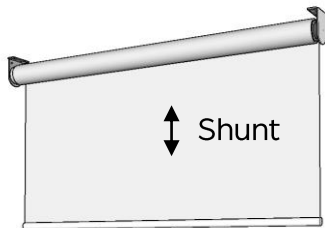


Press and hold the **MY** button until the blind shunts

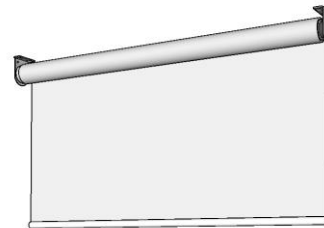

Intermediate stop removed

Adding Remotes

Copying a channel on one remote to a new remote

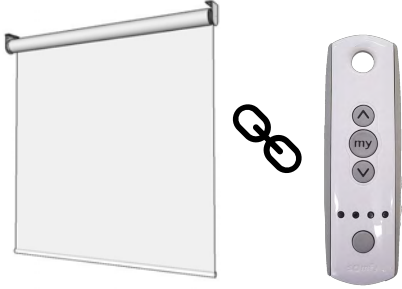

Start with a remote control that is already paired to the motor



If you have a multi channel remote, select the channel you wish to pair the blind to




Press and hold the red button on the back of the remote until the motor shunts




Within 60 seconds, take the new remote control...



If it is a multi channel remote, select the channel you wish to pair the blind to

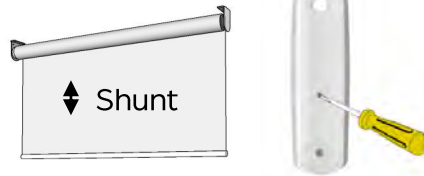

Press and hold the red button on the back of the remote until the motor shunts

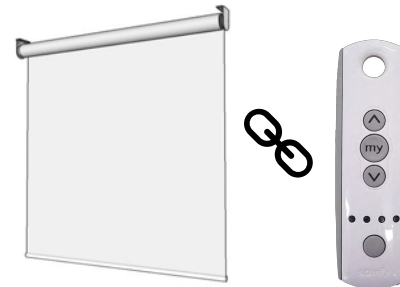


New remote paired




Repeat this procedure for each channel you want to copy to the new remote control

Motor Reset


Reset motor back to factory settings – wipes all remotes, limits and sensors

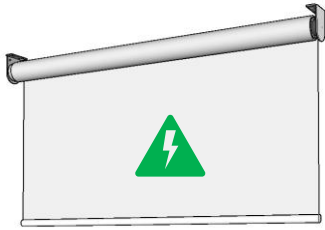


Begin with the power applied to the blind for at least 60 seconds

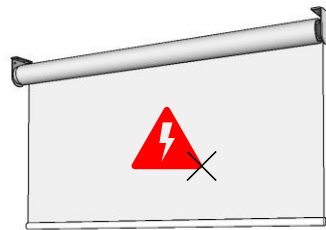


Turn off the power for 10 seconds

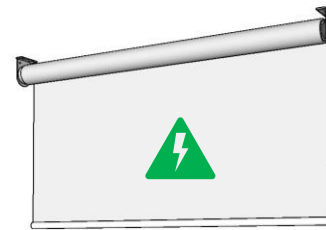


Turn on the power for 10 seconds

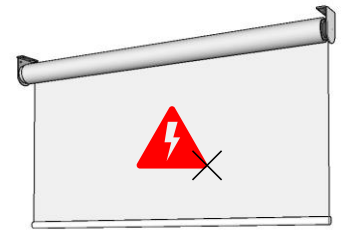

Turn off the power for 10 seconds

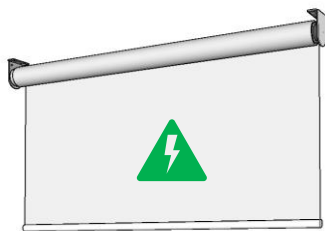


Turn on the power

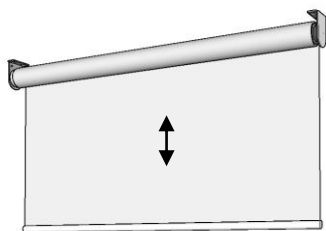

The blind will now travel for 5 seconds in one direction



Press and **hold** the button on the back of the handset until the blind shunts **2 times** with a **pause** between the shunts

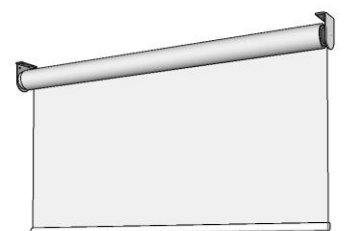

Factory reset complete